

The Natural Angle

VOLUME 18: ISSUE 1

THIS NEWSLETTER PUBLISHED FOR MONETTA FARRIER SPECIALTIES, INC.

Farriery for the Equine Frog / Digital Cushion Complex

by Stephen E. O'Grady, DVM

The importance of the equine frog, regarding the health and function of the foot, is often not recognized. Furthermore, it is hard to divorce or separate the frog from its association with the digital cushion (*Figure 1*). The conformation of the palmar/plantar section (and the overall conformation) of the foot is determined by the size and mass of these combined structures. Furthermore, there appears to be a symbiotic relationship between these two structures such that when the size of digital cushion decreases, the mass of the frog will increase due to additional forces. Farriery plays a major role in maintaining the health and destiny of these two structures.

The different components of the palmar foot, including the laminar junction, hoof wall, bars, unguis cartilages, frog, and digital cushion; each play a significant role in dissipation and distribution of force (*Figure 2*). Any dysfunction in one or all these components of the palmar foot will lead to forces being transferred to more sensitive structures, either within the hoof itself or to more proximal structures, causing subsequent injury. Two theories have been proposed to explain the mechanism of force distribution using the soft tissue structures in the palmar foot. The pressure theory suggests that the frog pushes upward into the digital cushion at ground contact to

force the lateral cartilages outward. On the other hand, the depression theory emphasizes the downward movement of the pastern into the digital cushion, which in turn forces the lateral cartilages outwardly. However, neither theory can explain the large negative pressure present within the deep areas of the digital cushion during both stance and locomotion (Dyhre-Poulsen P, et al. EVJ 1994). Considering the structural organization of the lateral cartilages, digital cushion, and enclosed vasculature, this suggests the likelihood that a hemodynamic mechanism plays a significant role in the dissipation and distribution of force during the landing and stance phase of the stride.

Continued on page 2

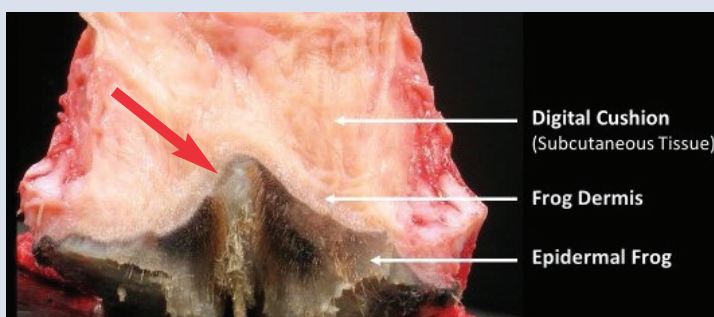


Figure 1. Gross anatomy of the soft tissue structures of the palmar foot with the unguis cartilages removed. Note the frog stay (red arrow). Photo credit M. Savoldi.

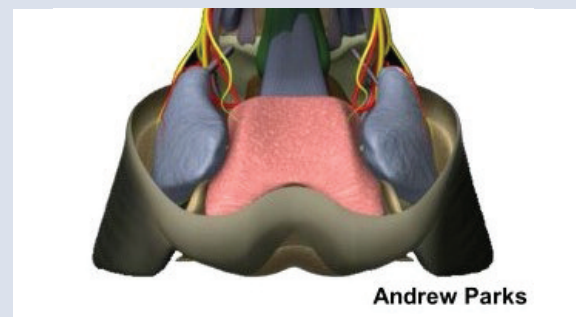


Figure 2. Components of the palmar foot ... laminar junction, hoof wall, bars, unguis cartilages, frog, and digital cushion.

Continued from page 1

However, the exact mechanism of force distribution and anti-concussive properties of the palmar foot is not fully understood and will not be debated here.

The frog (*cuneus ungulae*) is a wedge-shaped mass of keratinized stratified squamous epithelium with a softer structural texture because of an increased moisture content. Spherical masses of apocrine glands present in the corium of the frog have ducts that deliver secretions to the surface of the frog. This further contributes to the rubbery nature of the frog. The ground surface of the frog presents a pointed apex and central sulcus enclosed by two crura. Paracuneal (collateral) sulci separate the crura of the frog from the bars and the sole. The palmar aspect of the frog blends into the bulbs of the heels (*Figure 3*).

The digital cushion (*pulvinus digitalis*) is a highly modified subcutis consisting of a meshwork of collagenous and elastic fibers, adipose tissue, and small bundles of fibrocartilage. The digital cushion lies just proximal to the frog and is fixed to the adjacent structures by ligaments and thick fiber bundles. Only a few blood vessels ramify in the digital cushion. It is divided into two parts; the large bilobed toric part of the digital cushion fills the bulk of the space between the heels and bulges palmarly to fill out the bulbs of the heels. The cunean part is a smaller v-shaped collagenous extension of the toric part underlying the apex of the frog (*Figure 4*). The cells that comprise the digital cushion are slow dividing and only a few blood vessels ramify in the structure, therefore; it is extremely unlikely that it can restore or increase in size.

FUNCTION

Function is based on the frog and digital cushion working in unison. As part of the epidermal hoof capsule, the frog would surely play a role in protection for the internal structures located above. Traction would be another function where the base of the frog and the descent of the apex would act as a brake on soft footing or on a slippery surface. Obviously, some of this traction would be assumed by the sharp edge of the shoe at the toe when shod. Together with the digital cushion, the complex plays a major part in the dissipation of the energy of impact and anti-concussion during the stance phase of the stride. Finally, an overlooked function of the frog is to act as an



Figure 3. Base, apex, and central sulcus enclosed by the two crura of the frog. Yellow line shows base of frog used as an expansion joint to hold heels apart.

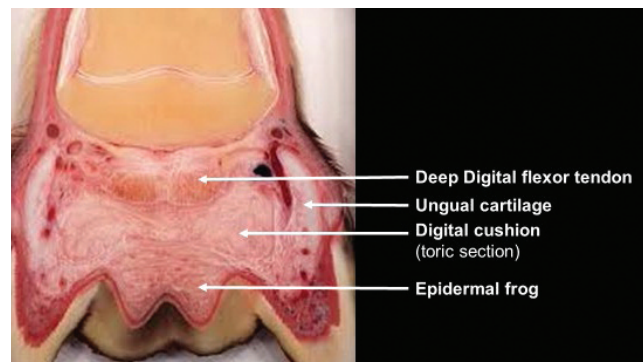


Figure 4. Illustration shows the soft tissue structures of the palmar foot. Photo credit C vonHorst.



Figure 5. Frog does not have adequate width/mass which allows bars to curve axially and the heels to contract.

Continued on page 3

Continued from page 2

expansion joint to maintain the width of the heels. If the frog becomes recessed and loses mass or if the heels migrate dorsally, the heels of the hoof capsule will contract (*Figure 5*). The frog and digital cushion provide a deformable interface between the rigid structures of the palmar hoof capsule that permits smooth expansion and recoil during weight bearing. Although the digital cushion is a predominant factor in absorbing the energy of impact with the ground, it must be combined with other soft tissue structures such as the coronary cushion, the laminar junction, the lateral cartilages and the extensive network of venous plexuses throughout the foot which are involved in this complicated function. From a straightforward mechanical perspective, a large frog and a well-formed palmar foot will play a significant role in cushioning hoof impact which argues for the necessity of maintaining a large strong healthy frog/digital cushion complex.

FARRIERY

The appropriate farriery is essential to maintain or promote a healthy frog. Furthermore, it is extremely rare to see thrush when the frog has adequate size and substance. At the onset of the trim, it is easy to assess the

dimensions of the frog either by measurements or just visualization. The width of a healthy frog should be 65-70% of its length (Turner 1988). The frog should not be excessively recessed between the heels of the hoof capsule or protrude below the ground surface of the heels. The frog will generally be slightly recessed at the end of a 4-6-week shoeing cycle as the heels grow forward during this time. The author's basic approach to trimming the palmar foot will be outlined here.

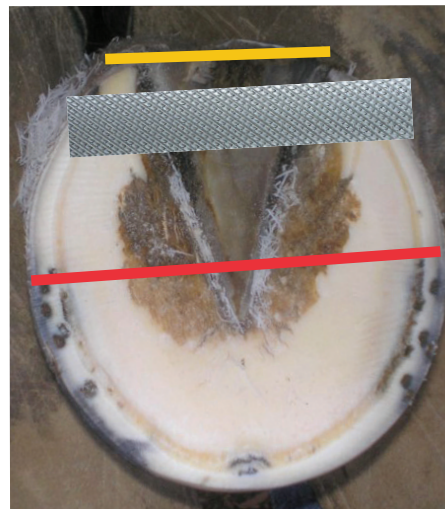


Figure 6. Trimmed foot. Red line denotes the widest part of the foot. Yellow line is the base of the frog. Approximate proportions of the foot are noted on either side of the red line. Note rasp showing heels and frog on the same plane.

Continued on page 4




KERCKHAERT

Choose Your Shape

The Diamond Tracker is the first shoe in this style easily converted for both front and hind. It is available in sizes 00 - 2.



The Kerckhaert Steel Triumph Unclipped is a Rim-type shoe with bevels and solid heel area. It is available in front sizes 00 - 3 and hind sizes 00 - 2.





Diamond Tracker



Kerckhaert Steel Triumph




Front



Hind




BELLOTA DELIVERS THE BEST PERFORMING RASPS IN THE INDUSTRY



AGGRESSIVE RASP CUT

Easy cut, ideal for trimming




TOP LEVEL & TOP LEVEL LONG

FILE side: INTERMEDIATE cut for excellent and efficient finish




PRIME LEVEL

FILE side: CHIP BREAKER style for smoother finish of the outer wall



VERY AGGRESSIVE RASP CUT

For quick removal of hoof material in all working conditions




TOP SHARP & MINI

FILE side: INTERMEDIATE cut for excellent and efficient finish



CLASSIC

FILE side: EXTRA SMOOTH cut, ideal for "dressing" finish



MOST AGGRESSIVE RASP CUT

For fastest removal of hoof material



RAZOR+ & RAPTOR+

FILE side: COARSE cut for the most efficient finish in all working conditions




To view the full line of BelloTA farrier products, including videos and tool specifications, visit bellotafarrier.com.

NEW! PRIME FINISH+ FILE




FILE side 1: COARSE cut for the most efficient finish in all working conditions



FILE SIDE 1

FILE side 2: CHIP BREAKER style for smoother finish of the outer wall



FILE SIDE 2

Continued from page 3

A line is drawn or visualized across the widest part of the foot, the frog and sulci are cleaned with a wire brush and any loose exfoliating horn is removed from the frog. The surface at the base of the frog is reduced if it is slightly protruding below the ground surface of the foot. The heels of the hoof capsule are trimmed palmarly/plantarly to where the hoof wall and the frog are on the same plane. This will usually extend the ground surface of the heels to the base of the frog and places the heels and frog in a 'load sharing' position. Frog pressure has and will be debated endlessly, however, it's the author's contention that when a flat shoe is placed on the horse's foot, the descent of the frog from the weight of the horse counteracted by the deformable surface which the horse usually encounters, adequate but not excessive pressure is placed on the frog.

ABNORMAL HOOF CONFORMATION AND THE FROG

It is a physiological fact that the palmar foot should be loaded but no individual component should be overloaded. Hoof capsule distortions are among the varied causes that change the size, shape, and position of the frog. The change in position, either recessed or protruding below the ground surface will always be accompanied by a change in size and shape. When the frog is recessed between the heels of the hoof capsule, the expansion joint is lost, the heels will narrow and contract, and the load bearing will be directly shifted to the hoof wall. Furthermore, the void left from the decreased size of the frog will fill with dirt and debris, so now; instead of distributing the load it will put excessive pressure on the compromised frog and damage it further (Figure 7).



Figure 7. Foot shows a severe recessed frog. Inset shows the side view of a club foot.

Continued on page 5

Continued from page 4

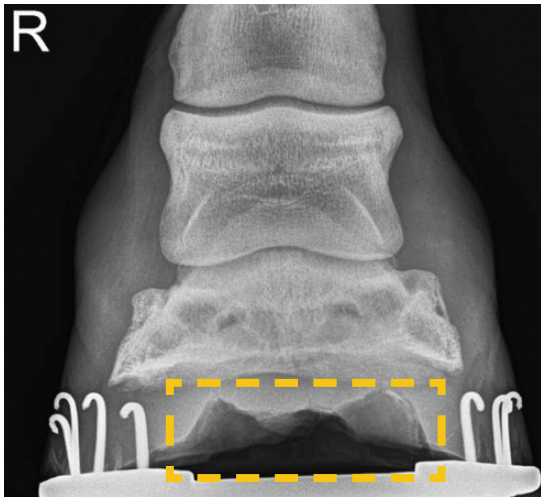


Figure 8. Lucency (yellow box) shows absence of frog between the hoof walls.

It also creates the ideal environment for thrush. This void left by the diminished size of the frog can be easily noted when veterinarians and farriers are evaluating radiographs (Figure 8). A recessed frog often occurs in upright feet or when a flexural deformity is present.

Generally, the heels of the hoof capsule and the frog can be aligned during routine trimming as described above and must be combined with the appropriate size shoe. When a flexural deformity (club foot) is present, the frog will be markedly recessed between the hoof wall which makes the task of putting the frog and hoof wall on the same plane harder as there is a shortening of the deep digital flexor muscle tendon unit. However, all the structures in the palmar foot still need to be uniformly loaded. In this case, the heels are trimmed to the plane of the frog to loads the palmar foot, toe length is reduced, and mild heel elevation is applied to compensate for the decreased length or shortening of the DDF muscle tendon unit (O'Grady 2012) (Figure 9A & 9B).

The other scenario is the frog protruding or prolapsing below the ground surface of the foot and is generally seen with the long toe and or low heel hoof capsule distortion. It can be caused by damage to the digital cushion or the heels of the hoof capsule migrating dorsally such that the frog will displace palmarly and downward. Over time, the frog will become large and bulbous due to



Figure 9A. Foot shown in Figure 7 after trimming and heel elevation.

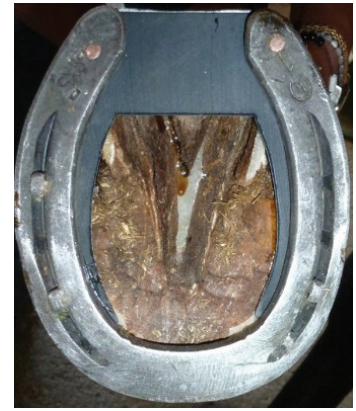


Figure 9B. Ground surface of foot shown in figure 7.



Figure 10A. Foot with under run heels and prolapsed frog.



Figure 10B. Rasp shows frog prolapsed below the ground surface of the hoof wall.

stimulation from the ground and to counteract excessive weight bearing. The heels will now have to be trimmed using the rasp alongside of the frog instead of using it across the palmar section of the foot. In the reverse situation from the recessed frog, more weight bearing is transferred to the protruding frog and decreased on the hoof wall. There also appears to be a correlation in horses with low heels, that when the mass of the digital cushion decreases from overload, the mass of the frog increases to compensate (Figure 10A & 10 B).

The object of the farriery here is to reduce the amount of frog below the ground surface of the foot and return the palmar foot to a 'load sharing' function. Obviously, the method used is dependent on the size of the frog and duration. Changing the position of the frog can be accomplished in many ways. A wooden shoe can be applied briefly which will quickly put the heels and frog on the same plane (also improve a thin sole). Using a shoe with a frog or heel plate, which puts direct pressure

Continued on page 6

Continued from page 5

on the frog, will decrease its size and allow the heels to assume a better position. If time permits, one of the author's favorite methods is to remove the shoes and briefly leave the horse barefoot. The horse is placed on a walking program until the frog is reduced to the same plane as the hoof wall. The heels are now trimmed at 10-day intervals until the palmar foot is load sharing which usually takes 6-8 weeks. The shoes are then replaced (Figure 11A & 11B).

The exact mechanism by which the horse loads its foot is unclear and continually being studied. However, when the foot strikes the ground, the distal phalanx descends distally and palmarly/plantarly causing the quarters to flare and move outwardly. It appears that the main contributor to heel motion is a continuation of this flaring of the quarters during weight bearing (Thomason 2007). In the palmar foot, all of the soft tissue structures are important in absorbing energy when the foot impacts the ground and as the frog/digital cushion complex form the bulk of the soft tissue; maintaining the health of this component of the palmar foot is essential. ■

Dr. Steve O'Grady operates Virginia Therapeutic Farriery which is a referral practice devoted to therapeutic farriery located in Keswick, VA. Website: <https://www.equipodiatry.com>

Disclaimer: Dr. O'Grady has no financial interest in Farrier Product Distribution (FPD) but routinely uses and recommends their products in his veterinary practice.



Figure 11A. Frog and heels of hoof capsule of foot shown in Fig. 10A after 5 weeks being barefoot.



Figure 11B. Foot shown in Fig. 10A with shoe replaced at 8 weeks.

MORE VALUE FOR YOUR MONEY. 30% MORE.

The new 210cc Vettec cartridge features a leak-free design, holds 30% more material and is easier to open and dispense. Bigger. Better. Lower Price.

Vettec ANIMAL HEALTH  KERCKHAERT



HOOF CARE TIPS

SUPPORTING AND MAINTAINING A HEALTHY FROG

by Larkin Greene • FPD, Inc.

One of the most pleasing sights to any hoof care practitioner, when looking at the bottom of a horse's foot, is the presence of a healthy, functional frog. Chances are, if the frog is healthy, well developed and in contact with the ground, the rest of the foot will be relatively healthy as well. When the frog loses its relationship with the ground, a host of potential problems are set into motion, including lack of protection, contracted heels, reduced capacity for absorbing concussion, and greater stress on the internal hoof structures. Furthermore, a compromised frog often provides the environment for fungi and bacteria to set up shop, complicate treatment, and lead to thrush. That list should be enough to make folks want to take care of it, perhaps even revere it.

Historically, restoring frog function has been problematic, especially when a loss of overall mass puts it a considerable distance from the ground. The challenge, in addition to treatment for pathology, is to redistribute load bearing on the bottom of the foot. This raises three questions: how does one redistribute load evenly, how much support is the right amount, and how can it be applied consistently? In the early days when horses were largely utilitarian, applications were more

experimental, with mixed and unpredictable results. Typically, the choice was a leather pad with various combinations of packing including, pine tar, venice turpentine, oakum, straw, and cotton. Unfortunately, these applications provided neither uniform support, nor reliable protection from debris and sand ingress. Thankfully, today there are a number of material choices and methods that appear to be effective and consistent, including steel and aluminum heart-bar shoes, synthetic shoes, frog support pads, dental impression materials, and urethane pour-in products.

In the late 1990's, Vettec introduced EquiPak, a fast-setting liquid polyurethane that could be poured into the bottom of a healthy foot for both protection and varying degrees of support. It allowed farriers and vets to create a uniformly supportive, flexible pad made from a material that was known for distributing load and dampening concussive force. EquiPak was an important development in modern materials because it also had everything a user could want; it was really quick, bonded well, lasted well, and many variations grew from the imagination of those who used the product. It was the first product that bonded reliably to the sole and frog



while keeping out debris (urine and manure) throughout the shoeing cycle. Not only did it effectively protect and support the bottom of the foot, users reported that it often restored concavity and increased sole thickness as well. The variations and additional materials that grew out of this basic application include frog pours, stepped pours, combination pours when different material consistencies are required in the front or back half of the foot, even layering to create soft materials against the solar surface, and more durable materials against the ground. Today, over twenty years later, there are many ways to create a pour-in pad, and an abundance of products that can be combined to support healthy frog development and function. ■

THE NATURAL ANGLE is published to provide you with new and useful information about the industry. It is published through a cooperative effort of FPD, Kerckhaert Horseshoes, Liberty Horseshoe Nails, Bellota, Bloom Forge, Vettec and your supplier.

Articles in this publication are the property of *The Natural Angle* and cannot be reprinted without express permission. For information concerning reprints, please contact Dan Burke, FPD, P.O. Box 1328, Shelbyville, KY 40066 or Email: fpd@farrierproducts.com.

If you have questions, comments or ideas concerning the articles published in the Natural Angle, please contact your distributor. We welcome your input. *The Natural Angle* is designed and edited by Graphic Response. ■

Ask Us About These Quality Products



RANGER LITE PLAIN

The Ranger Lite by Kerckhaert has been designed for everyday use in both work and pleasure. It is easily shaped, hot or cold, and has a generic shape for front or hind. With a higher grade of steel for better wear and v-crease for better fit, this shoe provides the perfect solution for farriers who want the best results at the best price. Punched for City or Slim. One shape, sizes 000-3.



LIBERTY 5 COMBO SLIM

Combo nails are a modification of the City or Slim nail. Heads are slightly larger, but the shank is similar to the City or Slim. Available in Steel or Cu Copper Shield.

LIBERTY 5 CITY



The blade of the 5 City is slightly larger in dimension, providing more strength and durability. Available in Steel or Cu Copper Shield.


LIBERTY 5 SLIM



Primarily used for riding horses. Slimmer blade displaces less hoof and reduces damage to the wall. Head size similar to City nails. Available in Steel or Cu Copper Shield.

BELLOTA PRIME LEVEL RASP - 14"


The new Bellota Prime Level complements the Top Level rasp, providing the same wider, thinner model and aggressive rasp side with a chip breaker file side that produces a finer finish. Same weight as regular rasp models.

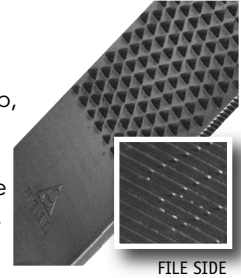

BELLOTA TOP LEVEL LONG RASP - 17"

Extra-long, 3" longer than normal rasps and ideal for large hooves. New format, 12% wider and 10% thinner than regular rasps, for perfect leveling balance and control.

Aggressive rasp side (8 teeth/row) for easy cut, ideal for trimming. Intermediate file side for excellent and efficient finish.

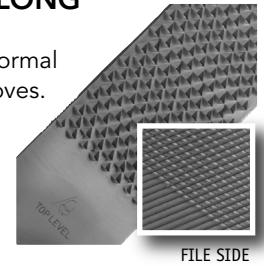

Outfitting Southeastern Farriers for Over 30 years

GREAT SERVICE AND QUALITY FARRIER SUPPLIES ARE OUR PRIORITY

MONETTA
FARRIER SPECIALTIES, INC.

MONETTA
FARRIER @TRYON

Aiken, SC
803.685.5101

Columbus, NC
828.894.0280

www.monettafarrier.com

PERMIT NO. 184
HAGERSTOWN, MD 21740
PAID
FIRST CLASS
U.S. POSTAGE

Return Service Requested

Monetta Farrier Specialties, Inc.
1755 Park Ave SE
Aiken, SC 29801